

Your Waterman's Cartridge-filled fountain pen is guaranteed unconditionally against defects of material or workmanship by:

WATERMAN PEN COMPANY, INC.

One DeForest St., Seymour, Conn.

Any pen should be flushed once or twice a year. To clean your Waterman's, just hold pen-point section under running water, then shake dry.

remove the barrel and note ink level in the transparent cartridge.
 ● **FOR EMERGENCY REPLETIS**, when you do not have a new cartridge on hand, simply dip the point of your pen in any available ink, and squeeze the empty cartridge as you would refill an ordinary fountain pen. This will fill the cartridge about $\frac{1}{2}$ full. Before inserting another cartridge, squeeze all the "emergency" ink supply from used cartridge, remove it, then hold pen-point section under faucet. Flush clean with water and shake dry.

● To reload your Waterman's just re-place the empty cartridge with a new one. With your pen you receive a supply of reload cartridges. And you can always buy more at your favorite jewelry, department or stationery store.
 ● Unused cartridges are absolutely safe to carry in pocket, purse or briefcase. They cannot leak or break. Leave a few at home, carry one with you and keep some at school or office.
 ● To check the ink supply in your pen,

... about your new Waterman's C/F Cartridge-filled Fountain Pen

Points to Remember



Presenting
 your new

Waterman's C/F CARTRIDGE-FILLED Fountain Pen



Welcome to years of writing pleasure with your new Waterman's C/F cartridge-filled fountain pen. The cartridge principle represents the greatest advance in fountain pen design since L. E. Waterman invented the fountain pen in 1884. Read these simple instructions carefully to discover how easy and enjoyable writing can be with the pen that loads like a gun... writes like a dream!

Here's How...

to operate your new

Waterman's

C./F. CARTRIDGE-FILLED


fountain pen



- **FIRST** Remove cap (it slips off) . . . then unscrew barrel.



- **SECOND** Take out empty cartridge and insert red-tipped end of a full ink cartridge into the pen-point section.

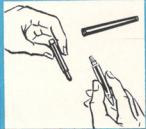

- **THIRD** Replace barrel, pushing until it catches thread, then screw up tight.



- **FOURTH** Hold pen point-down for few seconds, then press writing point to paper until ink begins to flow.

If ink does not flow readily, unscrew barrel and squeeze plastic cartridge gently until ink appears on surface of point.



To Reload the **C./F.** Matching Pencil . . .

first turn cap to the right as far as it goes, thus ejecting all the lead. Then retract and insert new lead in the nose, until only a small portion of lead is ex-

posed. Press down till lead catches and you're ready to write. Remove cap for eraser and extra leads. In purchasing new leads, buy Waterman's 'thin' leads.